## 10.3.5 CF05 - The light cannot work

Error code	Cause	Result
CF05	The light cannot work	The light cannot work normally.

## 10.3.5.1 Troubleshooting

Step 1 Replace the light.

Replace a new light to see if it's light issue.

Specification	Solution
Problem solved.	Repair complete.
Error still happen.	Go to step 2