

CF07 - The throttle does not work

Error code	Cause	Result
CF07	the throttle does not work	System cannot work normally.

Troubleshooting

Step 1 Replace the throttle.

Replace a new throttle to see if it's throttle issue.

Specification	Solution
Problem solved.	Repair complete.
Error still happen.	Go to step 2

Step 2 Replace the controller.

Replace a new controller to see if it's controller issue.

Specification	Solution
Problem solved.	Repair complete.
Error still happen.	Contact BAFANG